

 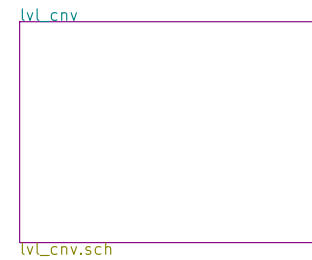
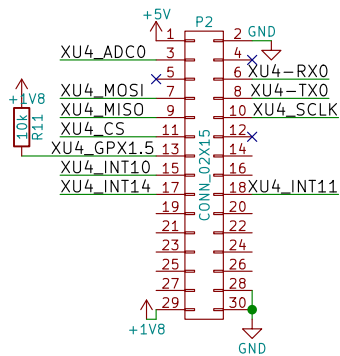

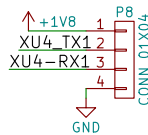
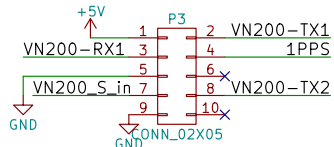
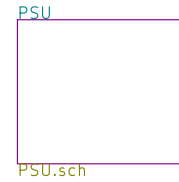
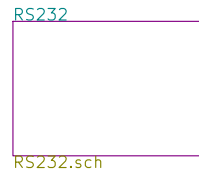
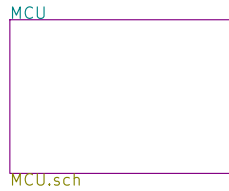
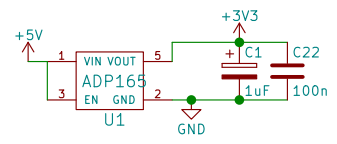


- P1: JST BM04B-PASS
- P2: molex 87832-6422
- P3: molex 87832-5423
- P4: AVX 009176002701106
- P5: Micro usb
- P6: JST BM03B-NSHSS-TBT
- P7: JST BM05B-NSHSS-TBT
- P8: JST BM04B-NSHSS-TBT

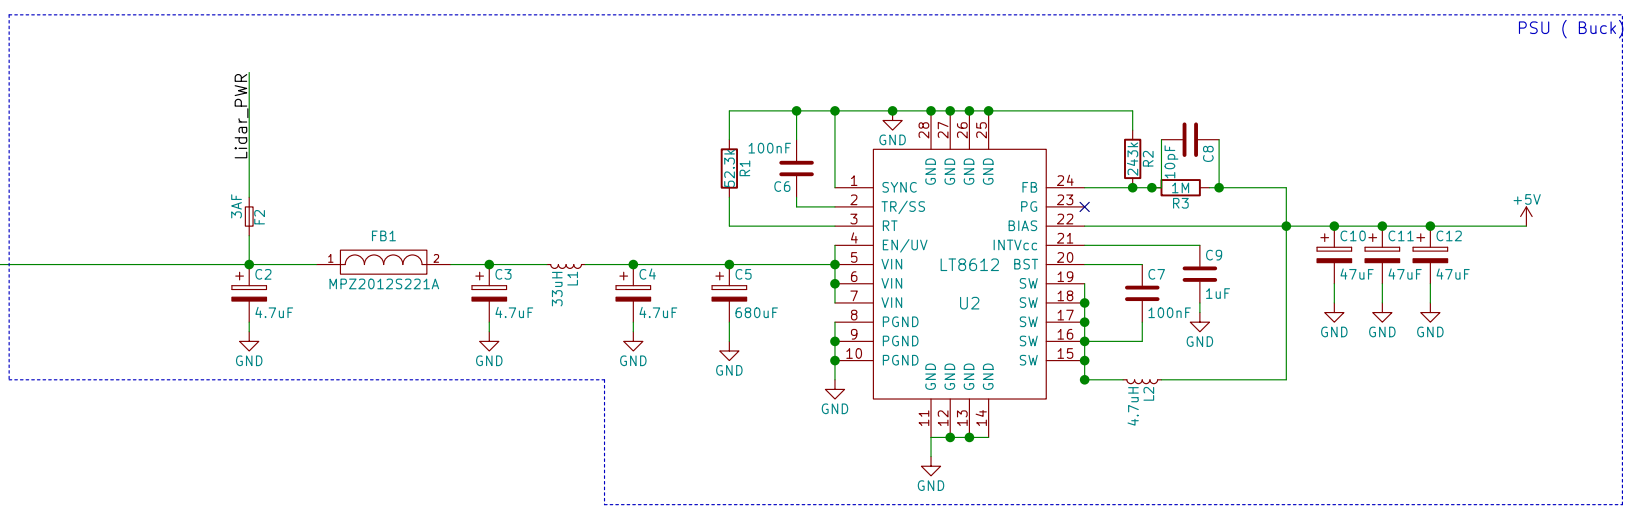


R10 should be replaced with a proper softstart circuit, as lidar startup current is high enough to blow the fuse

Sheet: /		
File: lidar_psu.sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. kicad 4.0.6-e0-634953ubuntu16.04.1	Id: 1/5	

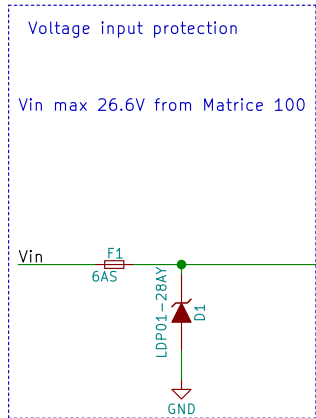

- F1 : 1206SFF600F/32-2
- F2 : 1206SFF300F/32-2
- L1 : 70-IHLP4040DZR330M5A
- L2 : IHLP4040DZER4R7M8A
- C5 : AFK687M50P44VT-F

Sheet: /PSU/	
File: PSU.sch	
Title:	
Size: A4	Date:
KiCad E.D.A. kicad 4.0.6-e0-634953ubuntu16.04.1	
Rev: Id: 2/5	

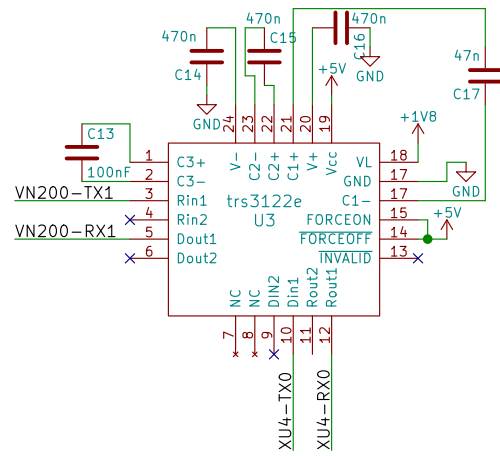


Sheet: /RS232/
 File: RS232.sch



Title:

Size: A4
 KiCad E.D.A. kicad 4.0.6-e0-634953ubuntu16.04.1

Date:
 Rev:
 Id: 3/5

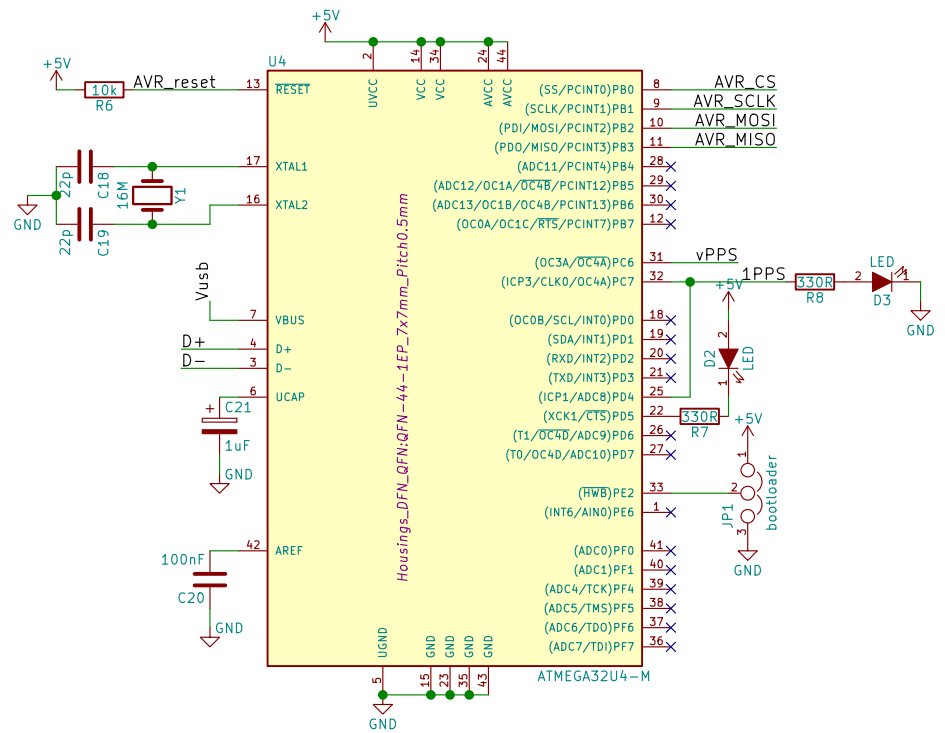

Sheet: /MCU/	
File: MCU.sch	
Title:	
Size: A4	Date:
KiCad E.D.A. kicad 4.0.6-e0-634953ubuntu16.04.1	Rev: 4/5

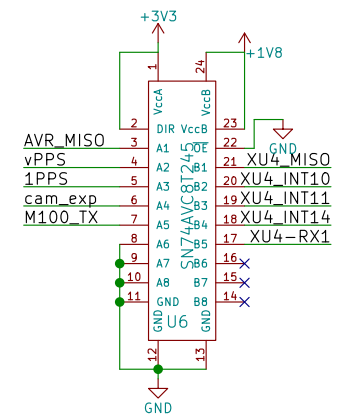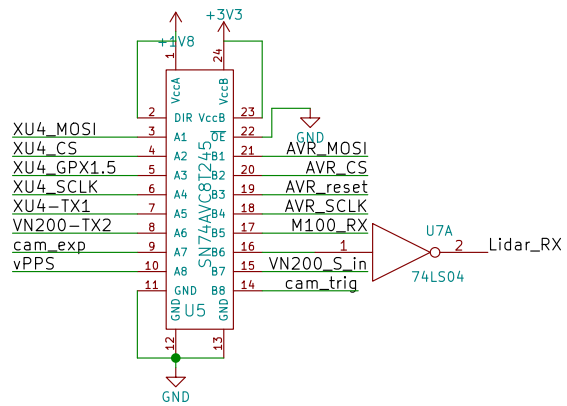

Sheet: /lvL_cnv/		
File: lvL_cnv.sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. kicad 4.0.6-e0-634953ubuntu16.04.1		Id: 5/5